

PRO DRIVE

613777-0113-E1

Illustrated Parts List

Model Series AIR COOLED

613777

TYPE NUMBERS
0113.

TABLE OF CONTENTS

- Air Cleaner
- Alternator
- Blower Housing/Shrouds
- Camshaft
- Carburetor
- Carburetor Overhaul Kit
- Controls
- Crankcase Cover/Sump
- Crankshaft
- Cylinder
- Cylinder Head
- Electric Starter
- Engine Gasket Set
- Exhaust System
- Flywheel
- Fuel Supply
- Governor Spring
- Ignition
- Intake Manifold
- Lubrication
- Piston/Rings/Connecting Rod
- Rewind Starter
- Valve Gasket Set

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

613777-0113-E1

1058 OPERATOR'S MANUAL











1330 REPAIR MANUAL





1319 WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.

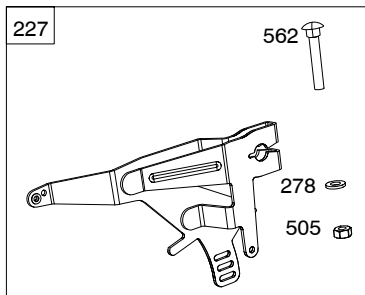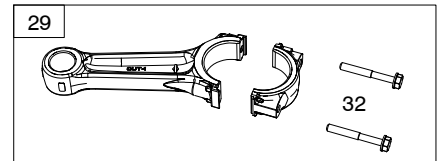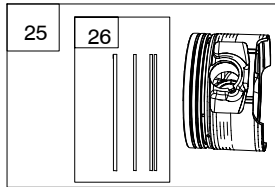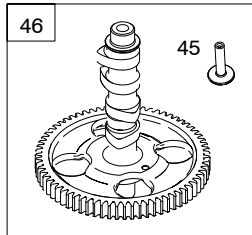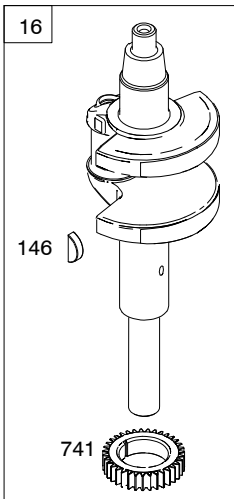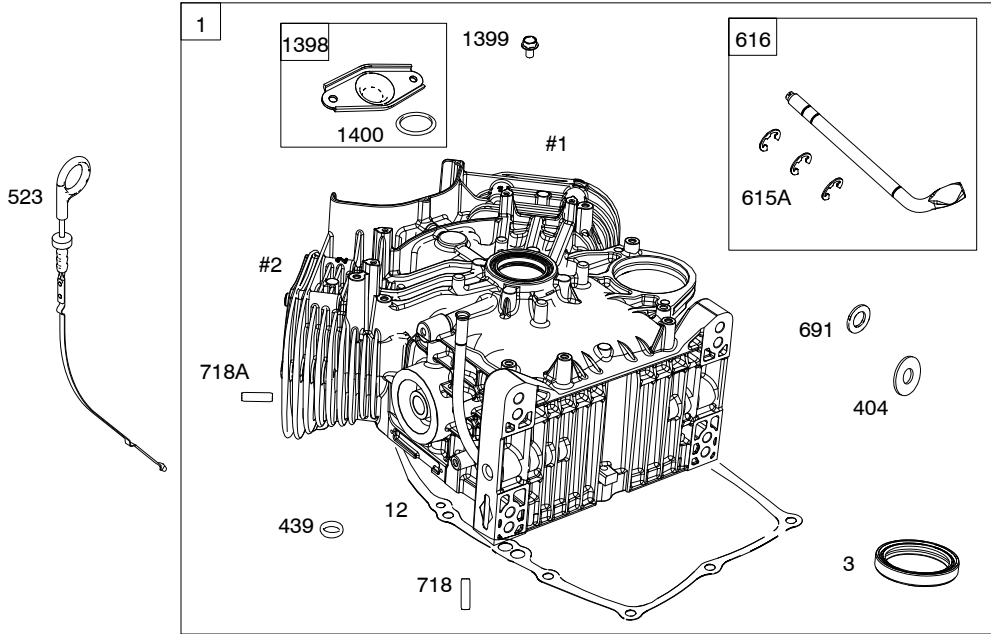

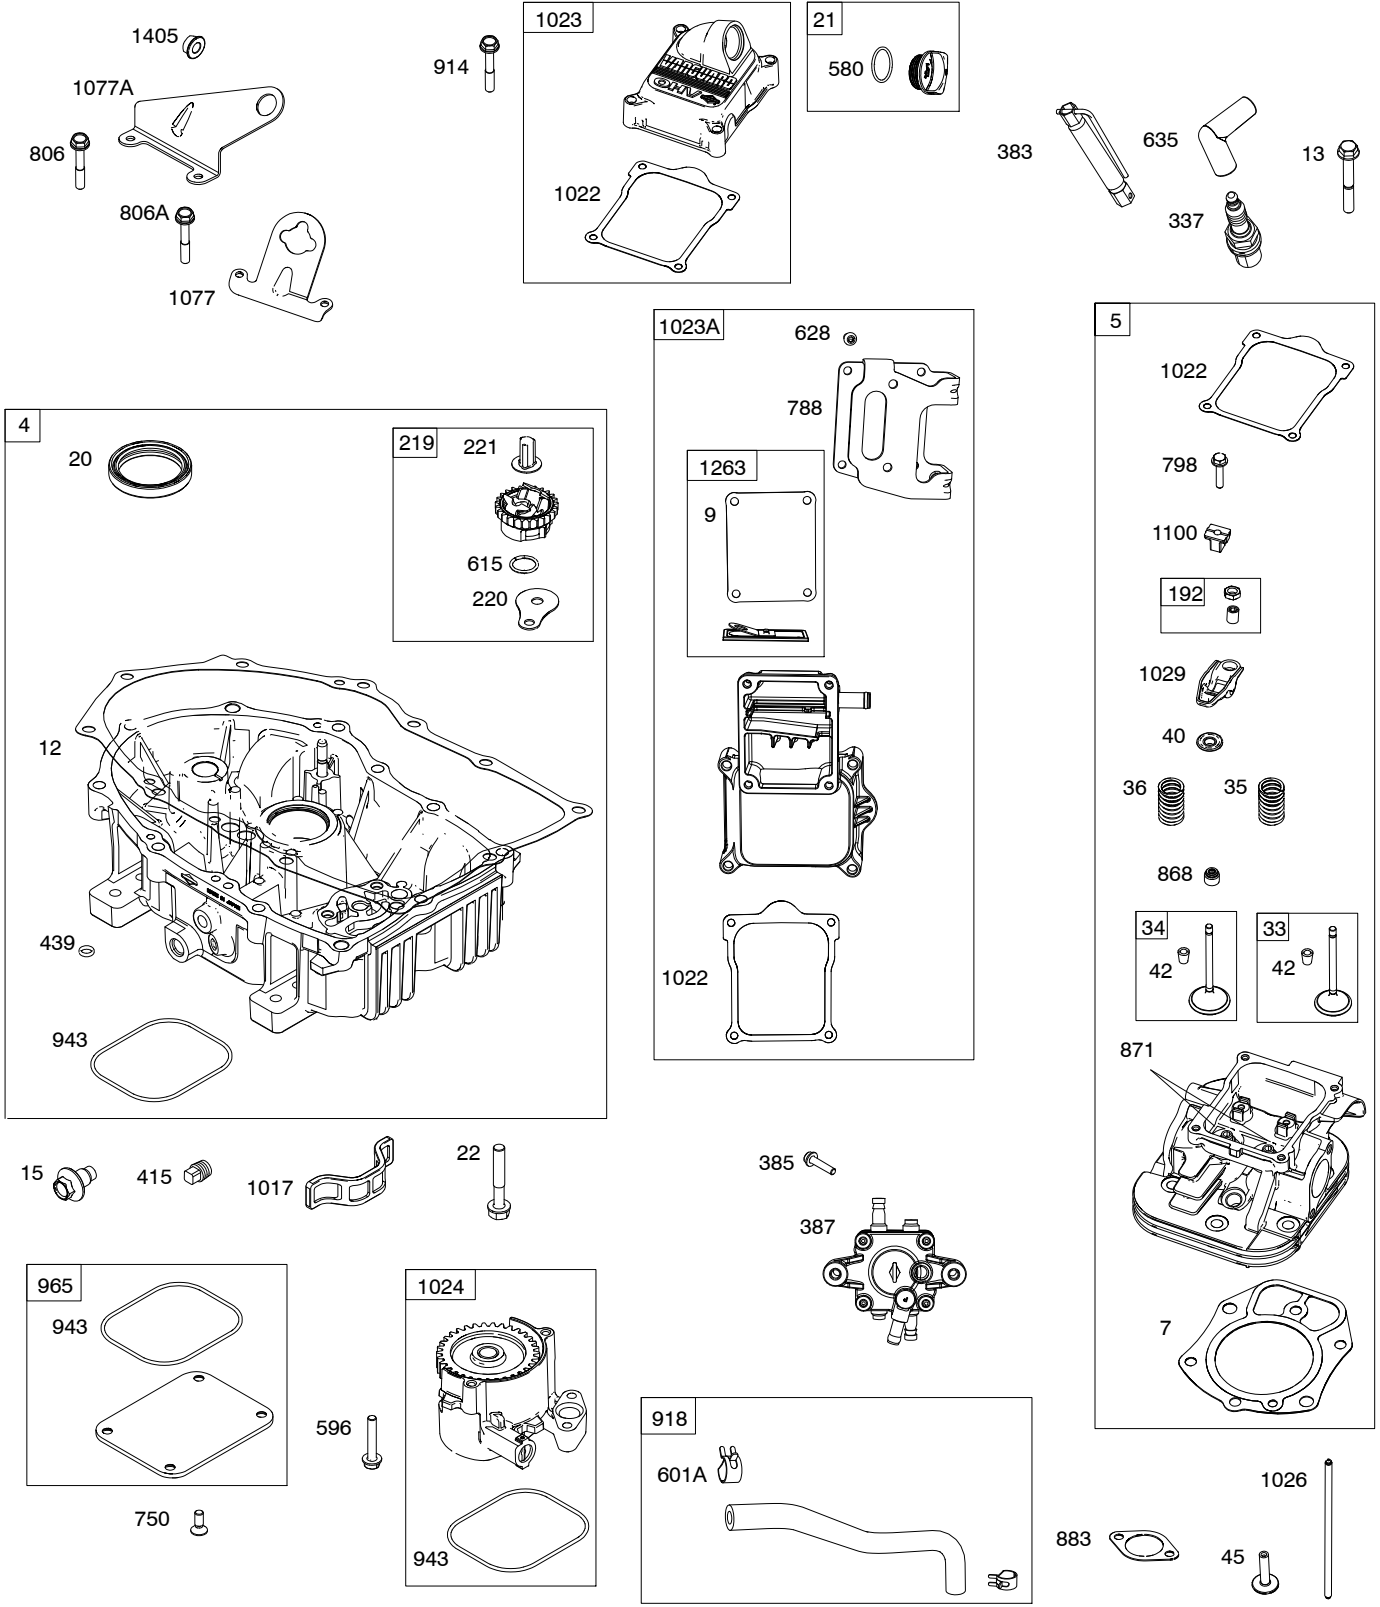













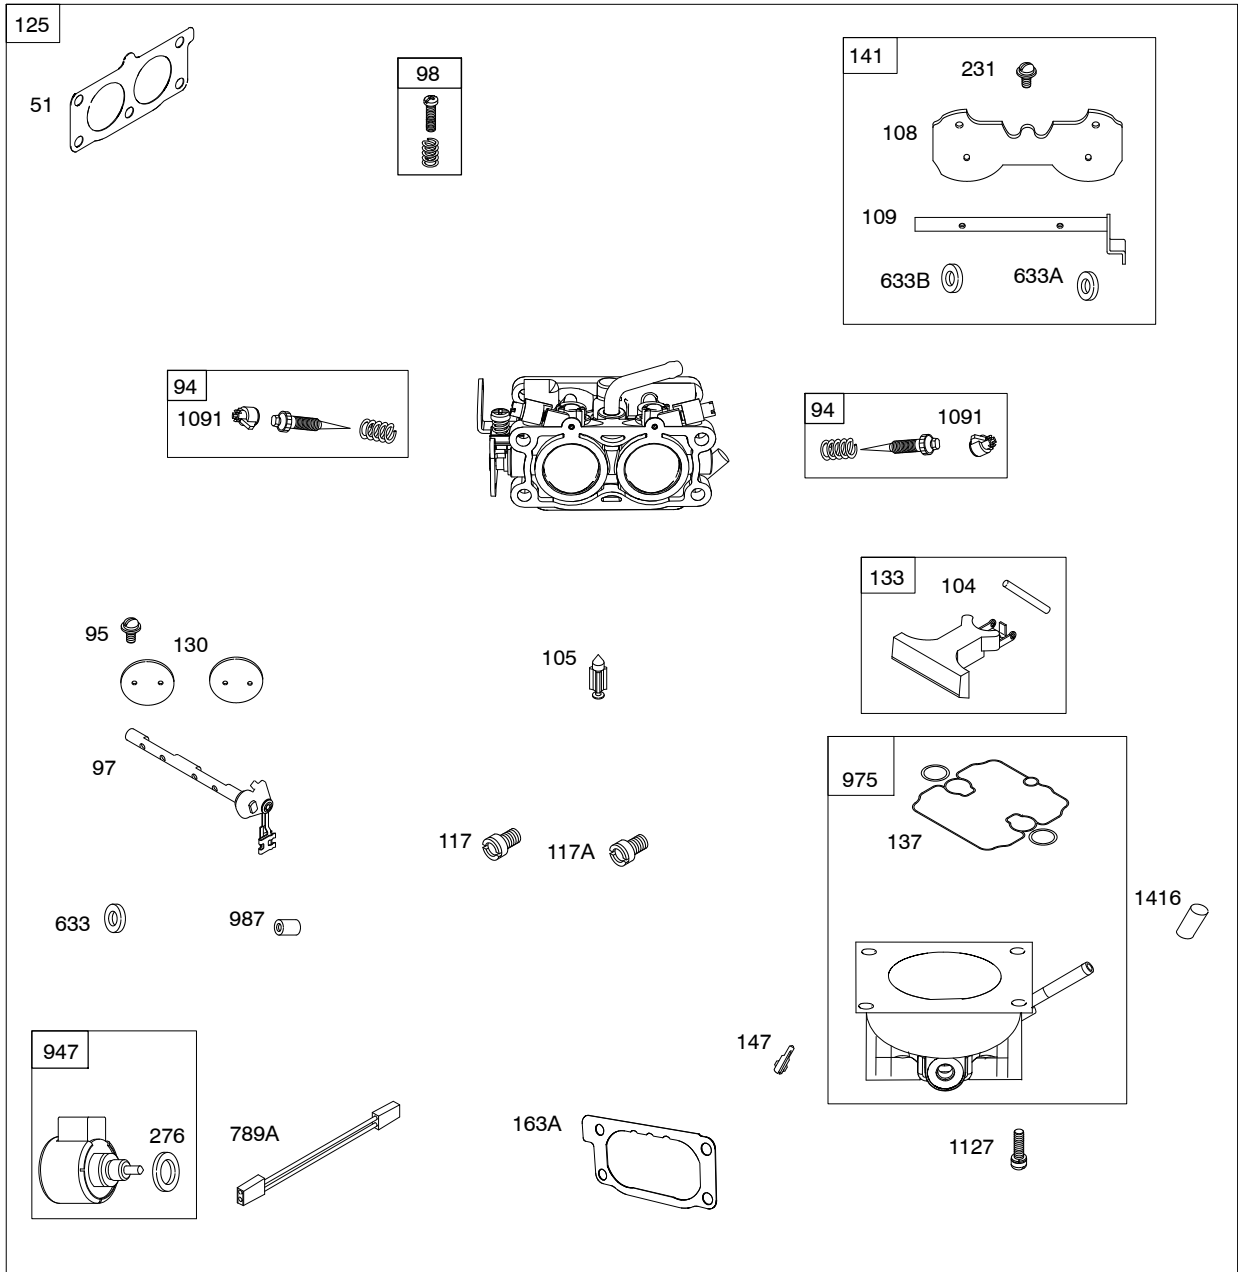




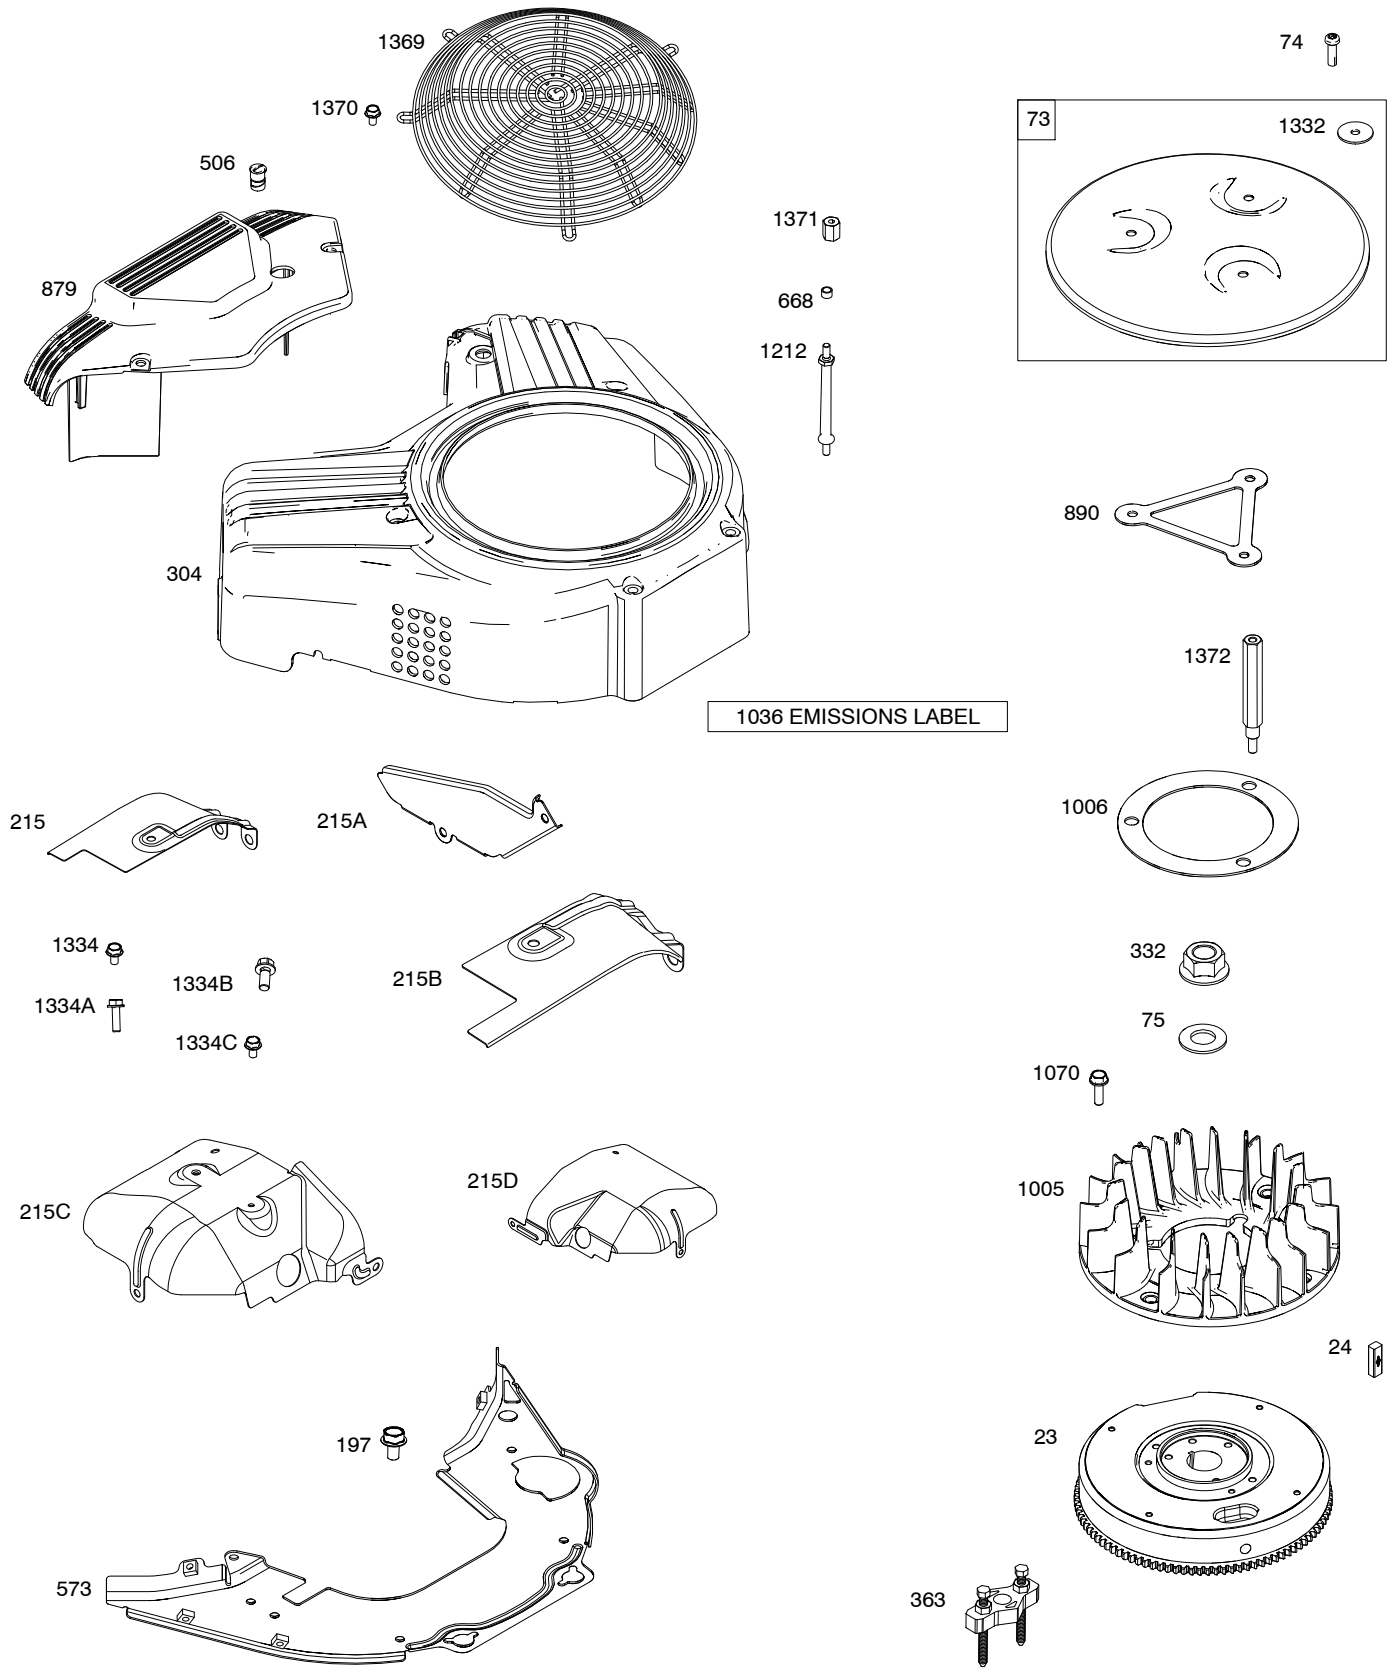


1036 EMISSIONS LABEL

613777-0113-E1

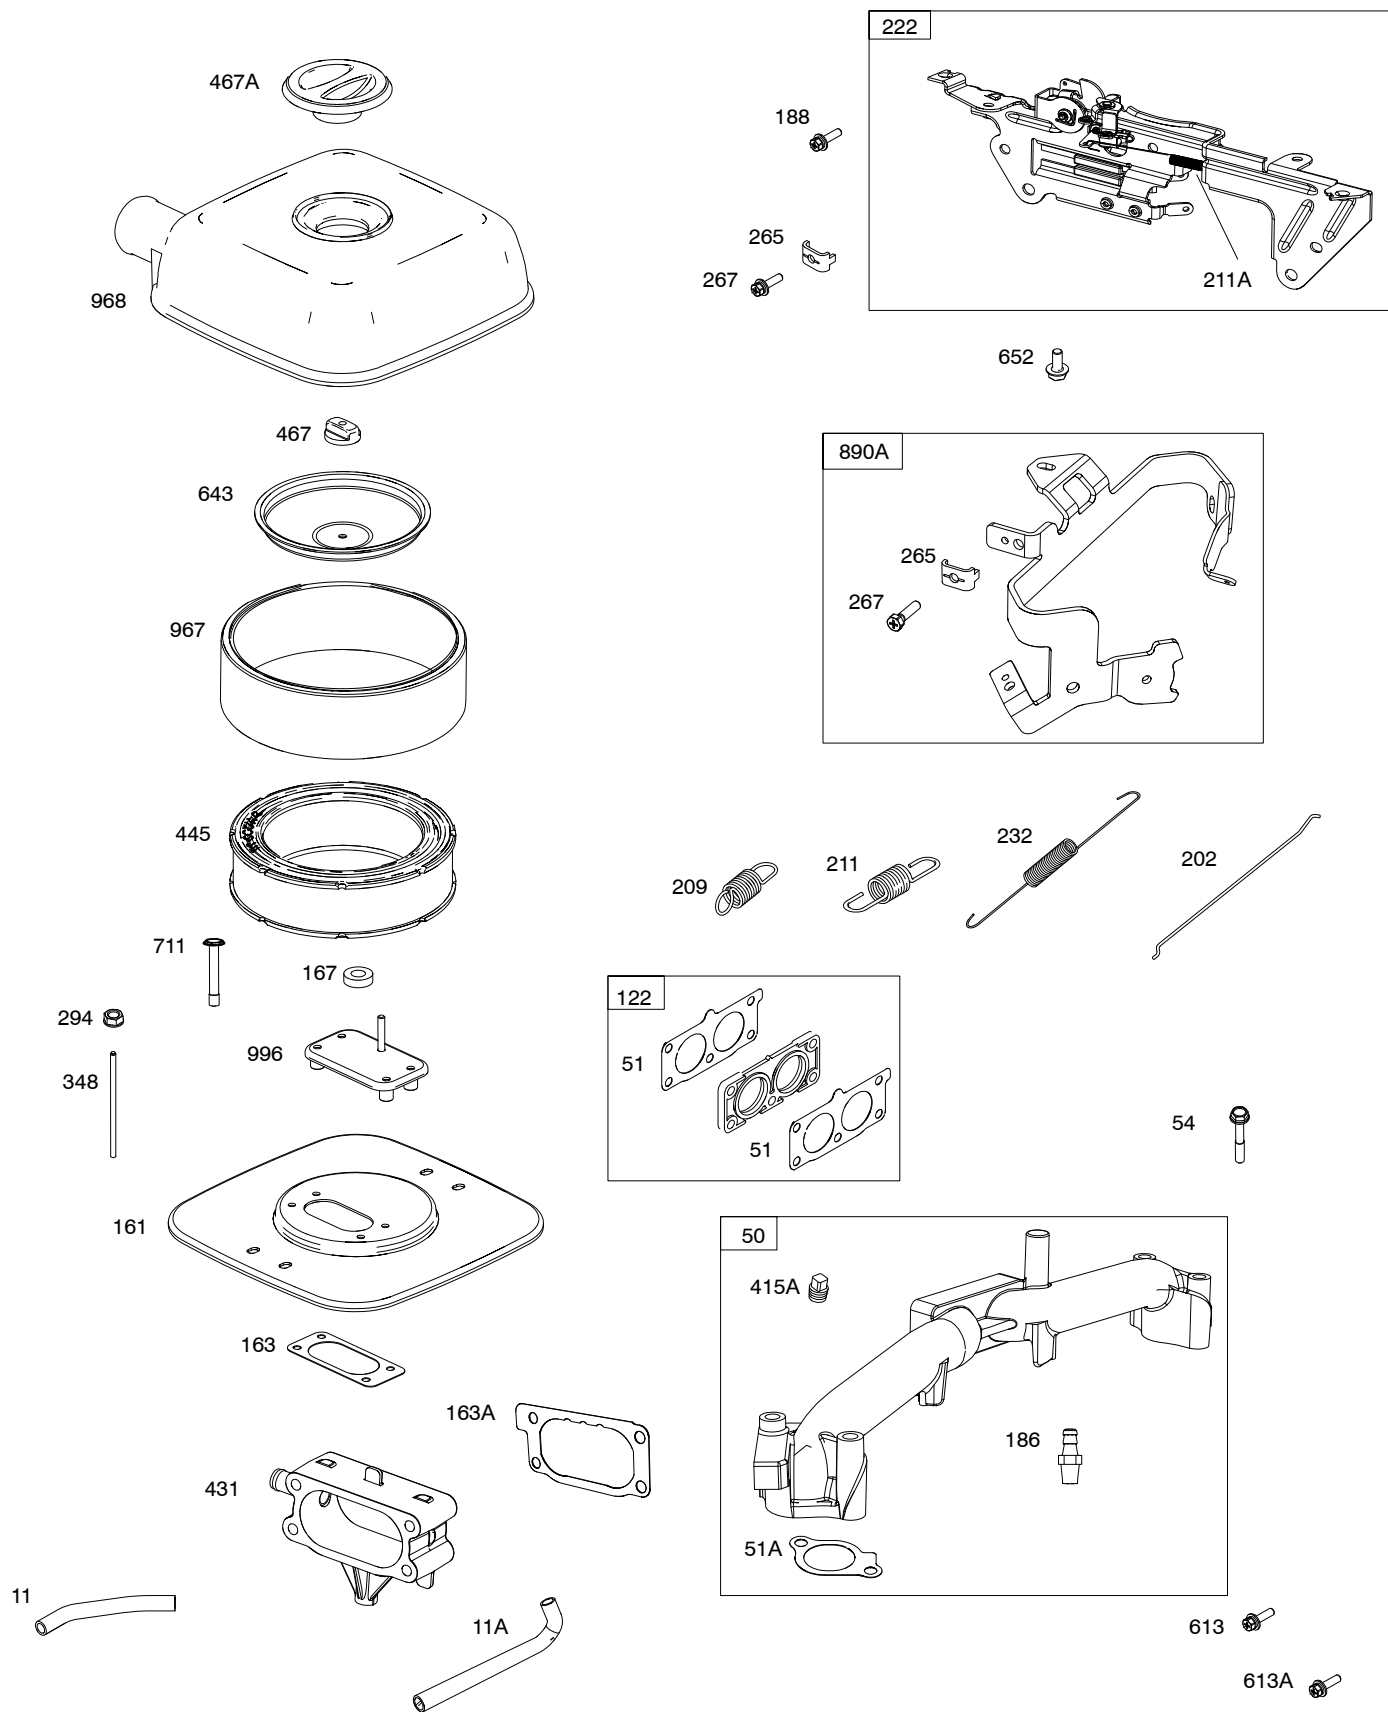

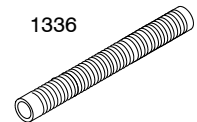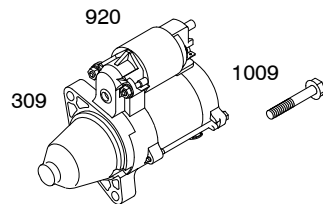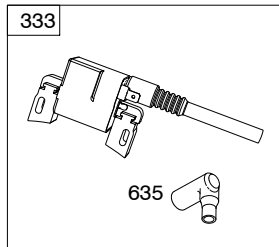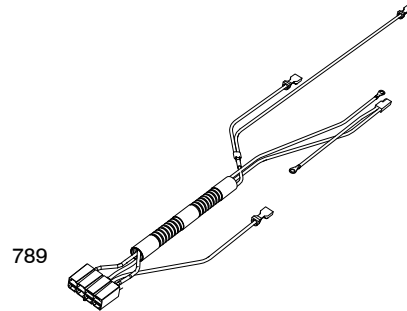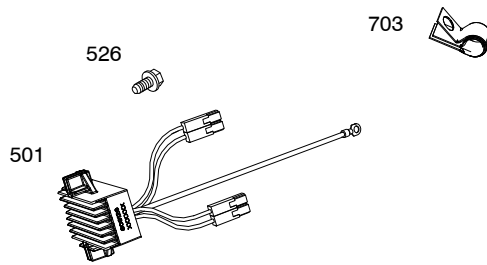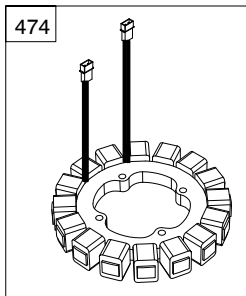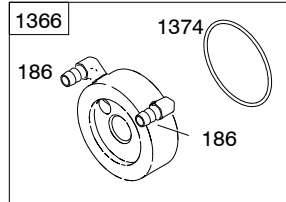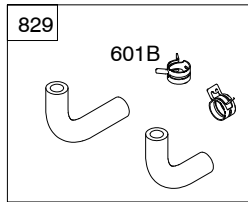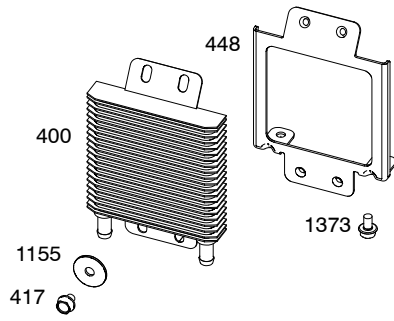

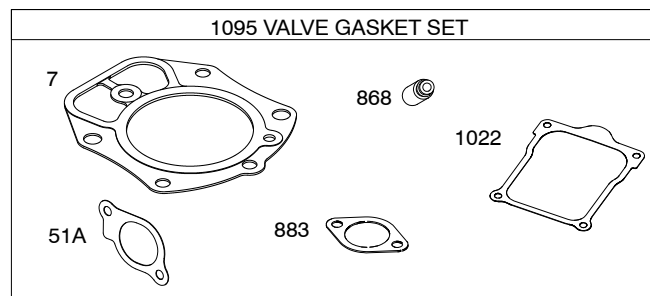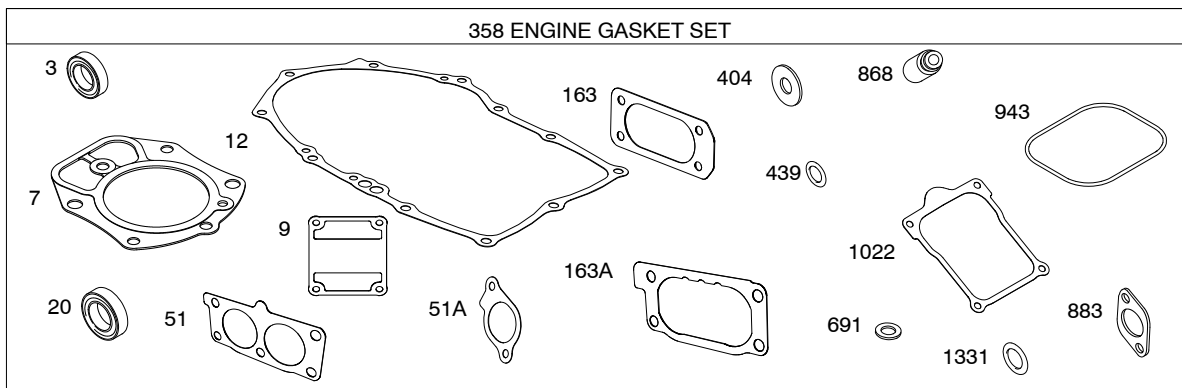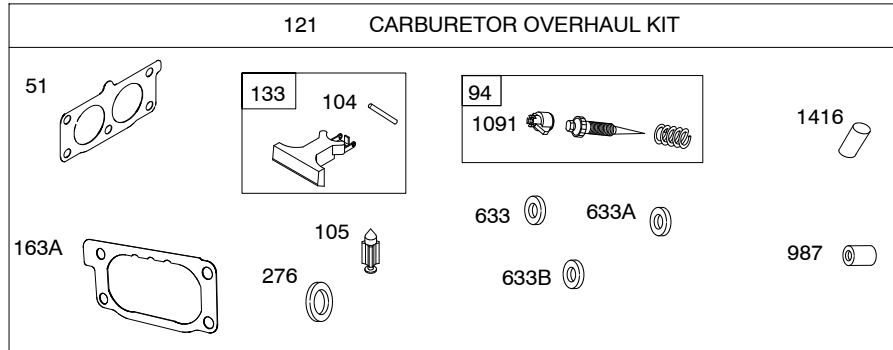

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	843352	Cylinder Assembly	50	844341	Manifold-Intake	188	692062	Screw
3	841596	Seal-Oil (Magneto Side)	51	841882	Gasket-Intake			(Control Bracket)
4	843853	Sump-Engine	51A	841592	Gasket-Intake	192	690083	Adjuster-Rocker Arm
5	842180	Head-Cylinder (Cylinder # 1)	54	844656	Screw (Intake Manifold)	197	841233	Screw (Back Plate)
		----- Note -----	73	841840	Screen-Rotating	202	842533	Link-
		842181 Head-Cylinder (Cylinder # 2)	74	809947	Screw (Rotating Screen)	209	843561	Mechanical Governor Spring-Governor (Brown)
7	809730	Gasket-Cylinder Head	75	842548	Washer (Flywheel)	211	809875	Spring-Governed Idle
9	842545	Gasket-Breather	94	843295	Kit-Idle Mixture	211A	690707	Spring-Governed Idle (Control Bracket)
11	842541	Tube-Breather	95	690728	Screw (Throttle Valve)	215	809728	Guide-Air (Cylinder #1)
11A	841021	Tube-Breather	97	843367	Shaft-Throttle	215A	809739	Guide-Air
12	843969	Gasket-Crankcase	98	809716	Kit-Idle Speed	215B	809737	Guide-Air (Cylinder #2)
13	809784	Screw (Cylinder Head)	104	690739	Pin-Float Hinge	215C	809738	Guide-Air (Cylinder #1)
15	807392	Plug-Oil Drain	105	843366	Valve-Float Needle	215D	809897	Guide-Air (Cylinder #2)
16	843354	Crankshaft	108	844652	Valve-Choke	219	809426	Gear-Governor
20	841596	Seal-Oil (PTO Side)	109	843368	Shaft-Choke	220	841608	Washer (Governor Gear)
21	843464	Cap-Oil Fill	117	843365	Jet-Main (Left Jet)	221	841026	Cup-Governor
22	807362	Screw (Crankcase Cover/Sump) (M8x50mm)	117A	842103	Jet-Main (Right Jet)	222	841527	Bracket-Control
22A	690676	Screw (Crankcase Cover/Sump) (M8x63mm)	118	843376	Jet-Main (High Altitude) (Left Jet)	227	809984	Lever- Governor Control
23	844653	Flywheel	118A	843365	Jet-Main (High Altitude) (Right Jet)	231	690728	Screw (Choke Valve)
24	222698s	Key-Flywheel (Aluminum)	121	843378	Kit- Carburetor Overhaul	232	843248	Spring-Governor Link
25	841837	Piston Assembly (Standard)	122	843268	Spacer-Carburetor	240	695666	Filter-Fuel
26	809972	Ring Set (Standard)	125	844657	Carburetor	265	691024	Clamp-Casing
27	807351	Lock-Piston Pin	130	841913	Valve-Throttle	267	841552	Screw (Casing Clamp)
28	807361	Pin-Piston	133	809637	Float-Carburetor	276	806476	Washer-Sealing
29	841838	Rod-Connecting	137	809645	Gasket-Float Bowl	278	842122	Washer (Governor Control Lever)
32	807363	Screw (Connecting Rod)	141	844533	Kit-Choke Shaft	294	690939	Nut (Carburetor Shield)
33	809901	Valve-Exhaust	146	691639	Key-Timing	304	841542	Housing-Blower
34	809902	Valve-Intake	147	843375	Jet-Pilot	309	843933	Motor-Starter
35	809374	Spring-Valve (Intake)	161	843118	Base-Air Cleaner	332	842222	Nut (Flywheel)
36	809734	Spring-Valve (Exhaust)	163	843117	Gasket-Air Cleaner (Air Cleaner Side)	333	844531	Armature-Magneto
40	807492	Retainer-Valve	163A	807375	Gasket-Air Cleaner (Carburetor Side)	334	692066	Screw (Magneto Armature)
42	807683	Keeper-Valve	167	841855	Seal-Air Cleaner Nut	337	491055s	Plug-Spark
45	809785	Tappet-Valve	186	841511	Connector-Hose (Oil Diverter)			
46	809879	Camshaft	187	791745	Line-Fuel (Cut to Required Length)			

613777-0113-E1

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
348	843360	Stud (Carburetor Shield)	613	692062	Screw (Muffler) (M8x18mm)	829	841503	Hose-Oil (Oil Cooler)
358	843370	Gasket Set-Engine	613A	809743	Screw (Muffler) (M8x25mm)	851	493880s	Terminal-Spark Plug
363	19203	Puller-Flywheel	615	698290	Retainer- Governor Shaft (Governor Gear)	868	691963	Seal-Valve
383	19374s	Wrench-Spark Plug	615A	809533	Retainer- Governor Shaft (Governor Crank)	871	692057	Bushing-Valve Guide
385	807084	Screw (Fuel Pump)	616	844180	Crank-Governor	879	842526	Cover-Carburetor
387	844527	Pump-Fuel	633	809641	Seal- Choke/Throttle Shaft (Choke Shaft)	883	809872	Gasket-Exhaust
400	841501	Cooler-Oil	633A	809638	Seal- Choke/Throttle Shaft (Choke Shaft)	890	809987	Bracket-Support
404	809436	Washer (Governor Crank)	633B	809644	Seal- Choke/Throttle Shaft (Choke Shaft)	890A	843358	Bracket-Support
415	690283	Plug (Oil Pressure Switch)	635	692076	Boot-Spark Plug	914	807357	Screw (Rocker Cover)
415A	794903	Plug (Intake Manifold)	652	807084	Screw (Support Bracket)	920	825418	Solenoid-Starter
417	843345	Screw (Oil Cooler)	668	841974	Spacer (Blower Housing)	943	842538	Seal-O Ring (Oil Pump Cover)
431	843362	Elbow-Intake	691	809287	Seal-Governor Shaft	947	842109	Solenoid-Fuel
439	692154	Seal-O Ring (Crankcase Cover/Sump) (Cylinder)	703	807116	Clip	965	842536	Cover-Oil Pump
445	692519	Filter- Air Cleaner Cartridge	711	843361	Screw (Carburetor Shield)	967	692520	Filter-Pre Cleaner
448	842857	Bracket-Oil Cooler	718	690959	Pin-Locating (Cylinder)	968	841847	Cover-Air Cleaner
467	691985	Knob-Air Cleaner	718A	809508	Pin-Locating (Cylinder Head)	975	842106	Bowl-Float
467A	841846	Knob-Air Cleaner	741	809432	Gear-Timing	987	809639	Seal-Throttle Shaft
474	841178	Alternator	750	842537	Screw (Oil Pump Cover)	996	843119	Shield-Carburetor
490	843433	Bearing-Magneto Side	789	844654	Harness-Wiring	1005	809950	Fan-Flywheel
501	841170	Regulator	789A	843364	Harness-Wiring (Fuel Solenoid)	1006	809999	Fan-Retainer
505	690238	Nut (Governor Control Lever)	798	691492	Screw (Rocker Arm)	1009	690711	Screw (Starter Motor)
506	809957	Screw (Carburetor Cover)	806	807362	Screw (Lifting Bracket) (M8x50mm Long)	1013	841602	Nipple-Oil Filter
523	842542	Dipstick	806A	807357	Screw (Lifting Bracket) (M6x40mm Long)	1017	842535	Screen-Oil Pump
526	691547	Screw (Regulator)				1022	809732	Gasket-Rocker Cover
562	843344	Bolt (Governor Control Lever)				1023	842540	Cover-Rocker (Rocker Cover #2)
573	809956	Plate-Back				1023A	844529	Cover-Rocker (Rocker Cover #1)
580	809894	Seal-O Ring (Oil Fill Cap)				1024	842539	Pump-Oil
596	807385	Screw (Oil Pump)				1026	809783	Rod-Push
601	841499	Clamp-Hose				1027	842921	Filter-Oil
601A	691038	Clamp-Hose (Black)				1029	807323	Arm-Rocker
601B	841597	Clamp-Hose (Oil Hose)				1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
						1054	280275	Tie-Cable
						1058	279083	Operator's Manual
						1070	807435	Screw (Flywheel Fan)
						1077	809729	Bracket-Lifting
						1077A	842616	Bracket-Lifting
						1091	691515	Cap-Limiter
						1095	841123	Gasket Set-Valve
						1100	791959	Pivot-Rocker Arm
						1119	691552	Screw (Alternator)
						1127	809715	Screw (Float Bowl)

613777-0113-E1

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1155	806647	Washer (Oil Cooler)	1336	841015	Shield-Wire Protective	1374	841506	Seal-O Ring (Oil Cooler Diverter)
1212	809958	Stud (Blower Housing)	1366	841510	Diverter-Oil Cooler	1375	842546	Cover-Breather Reed
1263	842544	Reed-Breather	1369	842858	Guard-Flywheel Fan	1376	842547	Screw (Breather/Reed Cover)
1319	794467	Label-Warning	1370	841233	Screw (Flywheel Fan Guard)	1398	842191	Cover-Fuel Pump
1330	272144	Repair Manual	1371	841537	Nut (Flywheel Fan Guard)	1399	690932	Screw Fuel Pump Cover)
1332	809948	Washer (Rotating Screen)	1372	809946	Stud (Rotating Screen)	1400	809894	Seal-O Ring Fuel Pump Cover)
1334	690677	Screw (Air Guide) (M4x12mm)	1373	841233	Screw (Oil Cooler Bracket)	1405	690941	Nut (Lifting Bracket)
1334A	692062	Screw (Air Guide) (M8x18mm)				1416	809640	Cap-Carburetor
1334B	807084	Screw (Air Guide) (M6x14mm)						
1334C	841233	Screw (Air Guide) (M6x10mm)						